


# Assembly Instructions

## Park-It Bike Racks - Surface Mount

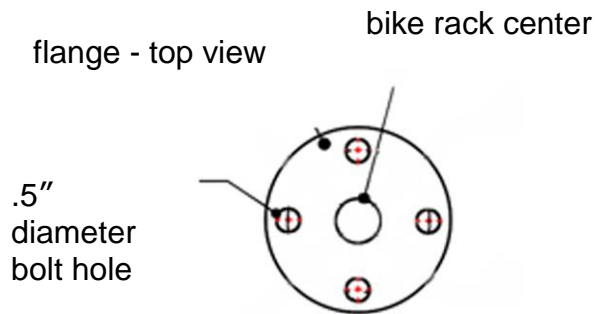

**Note:** Hardware not included. Use 1/2" x 3" lag bolts. It is recommended that concrete cure 28 days prior to mounting.

**Step 1:** Place the bike rack in its desired location with the flanges in place. Mark the center of the holes in each of the flanges on the mounting surface.

**Step 2:** Move bike rack aside. Using a 5/8" masonry drill bit, drill holes where marked in cement, 3" deep.

**Step 3:** Blow the hole clean of dust and other material. Insert anchor shields into holes and gently tap into place with a hammer.

**Step 4:** Align holes in flange with anchors and secure with 1/2" x 3" lag bolts.